

UBA 精密計量泵

電動旋轉閥型泵 --- E-R系列

- E-R 系列 UBA 精密計量泵，採用精密陶瓷旋轉閥控制液體的輸出和輸入，精密研磨的陶瓷柱塞確保穩定精準的液體容量計量，步進馬達或伺服馬達驅動精密的絲桿驅動系統，通過彩色觸控面板設置所有注液參數，無須對泵進行任何機械調整，能精準控制注液量。
- 極高的計量精度和重複一致性；精度優於正負千分之五。
- 適合用於中高黏度液體和含顆粒液體、醬料、膏體的定量灌裝。伺服電機配置的泵特別適合高速自動鹼性鋅錳電池生產線上注鋅膏。
- 316不鏽鋼的泵結構，所有的零件都有良好的耐腐蝕性。

Servo Drive Rotary Valve Pump

- With a precise ceramic rotary valve, the UBA Rotary Valve Style Dispensing Pumps are designed for filling medium to high viscosity liquid, gel or the liquid contain particles. Stepper Motor or Servo Motor with precision ball screw driving system provides an extremely precise linear motion control. All dispensing parameters are set by a control box with color touch panel, no mechanical adjustment needed.
- Typical dispensing accuracy is within $\pm 0.5\%$.
- Servo motor pumps are suitable for Zinc-gel filling on high speed alkaline battery line.
- 316 stainless steel pump construction.

應用：鹼性電池鋅膏、凡士林、醬料、液態焊錫、睫毛膏、唇膏、黃油、驗血管膠料、矽油、農藥等。

Application : Zinc-Gel of Alkaline Battery, Vaseline, Gel, Mascara, Lipstick, Grease, Silicone Oil, Blood Collecting Tube, Pesticide, etc.



型號 Model	柱塞直徑 Plunger Dia	行程 Stroke	注液量範圍 Dispensing Vol	循環速度 Cycle Rate	驅動 Drive	
	mm				mm	ml
E1-R03	4.7	12.7	0 - 0.23	0 - 50	步進馬達/伺服馬達 Stepper Motor or Servo Motor	50 - 75 PSI
E1-R05	7.9		0 - 0.63			
E1-R07	11.1		0 - 1.2			
E1-R10	15.9		0 - 2.5			
E2-R12	19.1	25.4	0 - 7.2	0 - 50		
E2-R14	22.2		0 - 9.8			
E2-R17	27		0 - 14.5			
E2-R20	31.8		0 - 20			
E3-R20	31.8	38.1	0 - 30	0 - 40		
E3-R26	41.3		0 - 50			
E4-1-R34	54	25.4	0 - 58	0 - 60	伺服電機 Servo Motor	
E4-2-R34	54	50.8	0 - 116	0 - 40		
E4-3-R34	54	76.2	0 - 174	0 - 30		
E4-4-R34	54	114.3	0 - 261	0 - 25		

UBA 精密計量泵

微量注液泵 --- E-D系列


- 具有極高的重覆精度；精密研磨的陶瓷柱塞確保穩定精準的液體容量計量，步進馬達驅動精密的絲桿驅動系統，精度優於正負千分之五。獨特的頂置式微量控制閥設計，有利於氣泡迅速排出，注液量更穩定。
- 適用於中低黏度液體定量注液。該系列泵特別適合微量液體注液，在實驗室條件下，部分型號對低黏度液體可以準確穩定分離吐出0.2 μ L容量。
- 適合各類醫藥、生化液體、凝膠類液體，微型電容器和電池電解液等應用。
- 316不鏽鋼的泵結構，泵的所有零件都有良好的耐腐蝕性。

Precise Micro Volume Dispensing Pump

- The UBA E-D Dispensing Pumps are designed for filling extreme small amount liquid. Precise micro space diaphragm valve controls the inlet and outlet of the pump. Precise ceramic plunger ensures accurate dispensing.
- Stepper motor with precision ball screw driving system provides an extremely precise linear motion control. All dispensing parameters are set by control box with color touch panel, no mechanical adjustment needed.
- Typical Dispensing accuracy is within $\pm 0.5\%$.
- UBA E-D Pump is suitable for dispensing lower and medium viscosity and pharmaceutical gel. Especially capable of dispensing extreme small shot of liquid. Some models are able to shot and drop down 0.2 μ L with stable volume.
- With a complete 316 stainless steel constructions, the pumps provide better anti-corrosion performance.

應用：香水、玻尿酸、指甲油、精華液、精油、生物製劑、試劑、驗血卡、UV膠、凝膠、電解液等。

Application: Perfume, Hyaluronic, Nail varnish, Essential oil, Biologicals, Culture Media, Blood testing card, UV Glue, Gel, Electrolyte, etc.

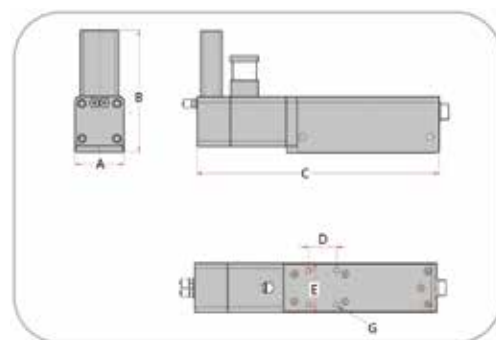

型號 Model	柱塞直徑 Plunger Dia mm	行程 Stroke mm	注液量範圍 Dispensing Vol ml	循環速度 Cycle Rate 次/分鐘	驅動 Drive	外型尺寸 Dimension						重量 Weight kg
						A	B	C	D	E	G	
E1-D02	3.2	6.3	0 - 0.050	0 - 80	步進馬達 Stepper Motor	45	111	243	25.4	31.75	M4	2.2
E1-D03	4.8	12.7	0 - 0.230									
E1-D05	7.9	12.7	0 - 0.630									
E1-D07	11.1	12.7	0 - 1.230									
E1-D10	15.9	12.7	0 - 2.514	0 - 50								
E2-D12	19.1	25.4	0 - 7.240									

NORDA 諾達股份有限公司 Norda Co., Ltd.

桃園總公司

桃園市龜山區萬壽路一段492之14號6樓
電話：02-82097066
傳真：02-82097022
EMAIL：Info@norda.com.tw
www.norda.com.tw

台中服務處

台中市西屯區中科路1388號
電話：04-24510093
傳真：04-24525302

台南服務處

台南市安南區安通路六段86號之13B
電話：06-2477916
傳真：06-2477906

